

GSM/GPRS/GPS TRACKER USER MANUAL



Thank you for purchasing the tracker. This manual shows how to operate the device smoothly and correctly. Make sure to read this manual carefully before using this product. Please note that specification and information are subject to changes without prior notice in this manual. Any change will be integrated in the latest release.

Contents

1	Summary	3
2	Main functions	3
3	Specs.	3
4	SIM card installation	4
5	Wires connection	5
6	Device Parameter Settings	5
	6.1 Initialization	5
	6.2 Set password	6
	6.3 Authorization	6
	6.4 Single Locating	6
	6.5 Get geographical location	7
	6.6 Auto continuous track	8
	6.7 Voice Surveillance	8
	6.8 Geo-fence	8
	6.9 Overspeed alarm	9
	6.10 ACC ON alarm	9
	6.11 SOS alarm	10
	6.12 Time Zone Setting	10
	6.13 Cut oil or circuit (optional)	10
	6.14 Recover oil or circuit	10
	6.15 Power failure alarm	11
	6.16 Check device setting parameters	11
	6.17 GPRS setting	11
	6.18 Web platform GPS tracking software	12

1 Summary

Working Based on existing GSM/GPRS network and GPS satellites, this product can locate and monitor any remote targets by SMS or GPRS.

2 Main functions

- GSM quad-band frequency for globe use;
- Real time tracking location by SMS/GPRS;
- Recover original password;
- Set authorized number;
- Overspeed alarm ;
- ACC anti-theft alarm ;
- SOS alarm ;
- Real time voice monitoring function ;
- Built-in backup battery to realize power failure alarm;
- Cut vehicle oil or circuit (optional).

3 Specs.

Content	Specs.
Dim.	97 mm x 51 mm x 15 mm
Weight	80g
Network	GSM/GPRS/GPS
Band	900/1800Mhz or 850/900/1800/1900 Mhz
GPS chip	UBLOX
GSM module	MTK60
GPS sensitivity	-159dBm
GPS accuracy	5m
Time To First Fix	Cold status 45s Warm status 35s Hot status 1s
Work voltage	9V-36V
Storage Temp.	-40°C to +85°C
Operation Temp.	-20°C to +55°C
Humidity	5%--95%

4 SIM card installation

4.1 Preparation

4.1.1 Open the package to check the device model number is correct, be with full accessories, or else please contact your supplier;

4.1.2 Choose SIM card, need insert a GSM SIM card into the device, please refer to the suggestion of your supplier for SIM card choice.

Notice:

Please insert SIM card before turning the device power switch to on;


The SIM card need open the GPRS function;

Please make sure SIM card with full balance.

4.2 Device light description

Note: the three lights must be stable lighting represents device can work normally.


Device will turn into sleep mode with lights off after around 5 minutes, it will wake up if make a call to device number.

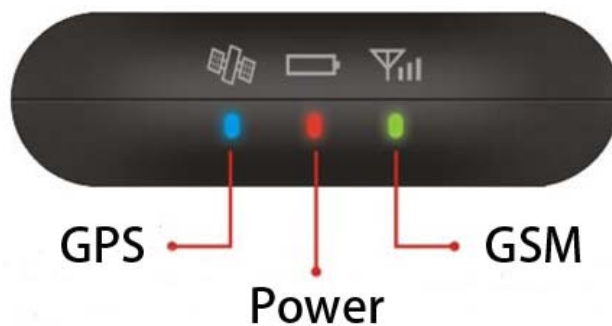

5 Wires connection

1. Red wire connects to vehicle power positive +
2. Black wire connects to vehicle power negative -
3. Yellow wire connects to oil pump or circuit control wires
4. Green wire connects to ACC wire

Note: Device must connect to ACC wire

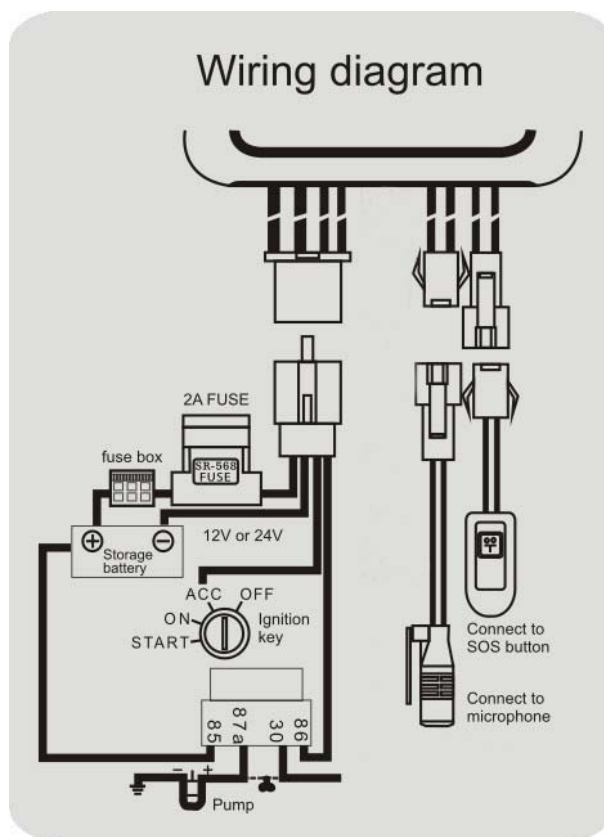

6 Device Parameter Settings

6.1 Initialization

Send SMS “#begin#” to the tracker, it will reply “begin ok” and initialize all the settings. (Default password: 123456). Remark: initialization is resetting all the

parameters to factory defaults.

For example, send SMS “#begin# ”, If succeeded, it will reply “begin ok”.

6.2 Set password

6.2.1 Set Password: Send SMS: “#**password#old password#new password#**” to the unit to change the password.

For Example, send SMS: “#password#123456#666888#” to device, it will reply SMS: “password OK”.

6.2.2 Make sure the new password is in 6 digits arabic numbers, or the device cannot recognize the password.

6.2.3 Resume original password: send SMS: “#**resume#**” to the device, it will reply SMS: “resume password, password is 123456”.

6.3 Authorization

6.3.1 Set authorization: send SMS “#**admin#password#cell phone number#**” to set up authorized number, device will reply “admin ok”.

6.3.3 Delete authorization send SMS “#**noadmin#password#authorized number#**” to delete the authorized number, device will reply “no admin ok”.


6.4 Single Locating

6.4.1 If there is no authorized number, any number dials up the device number, it will

report tracking message; if already set authorized number, then it will not respond when an unauthorized number calls it.

6.4.2 **Dialing tracking:** make a call to device number, it will hang up and reply a real-time tracking message.

6.4.3 **SMS tracking:** send SMS“#smslink#123456#”, it will reply a real-time tracking message.

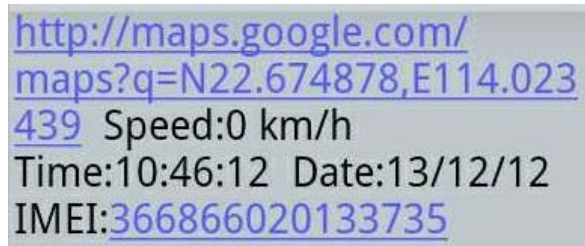

[http://maps.google.com/
maps?q=N22.674878,E114.023
439](http://maps.google.com/maps?q=N22.674878,E114.023439) Speed:0 km/h
Time:10:46:12 Date:13/12/12
IMEI:[366866020133735](#)

Note: when GPS signal is weak, you will receive the last location when GPS is available. If it is different with its exact current location, pay attention to check the time included in the SMS.

6.5 Get geographical location

6.5.1 Must set the SIM Card APN parameter firstly before using this function, if there is APN user name and password, Please refer to point 6.13 to set.

6.5.2 Send SMS: “**DW**” to device, it will reply current location info. For example:

ADD: Floor 5, Bldg C, LaoWei 2nd Industrial Park, DaLang South Rd,
Longhua town, Shenzhen,China

Note: this function may not work in some certain area.

6.6 Auto continuous track

6.6.1 Limited times auto track: Send SMS “**#at#30#sum#15#**” to the device, it will reply the tracking message at 30s intervals for 15 times. (default “s”:second).

6.6.2 Unlimited time auto track: Send SMS “**#at#30#sum#0#**” to the device. Remark: device must be connected to tracking software.

6.6.3 Cancellation: Send SMS “**#noat#password#**” to the device.

6.7 Voice Surveillance

It need connect external microphone.

6.7.1 The command to switch between Track and Monitor are “tracker” and “monitor

6.7.2. The default mode is “track” (Tracking status).

6.7.3. Send SMS “**#monitor#password#**” to the device, and it will reply “monitor ok!” and switch to “monitor” mode. Then use mobile phone to dial the device number, it will get through and enter voice listening function.

6.7.4. Send SMS “**#tracker#password#**” to the device, it will reply “tracker ok!” and restore to “track” mode.

6.8 Geo-fence

Set up geo-fence for the unit to restrict its movement within a district. The device will send message to the authorized number automatically when it exceed the district.

6.8.1 When the unit stays immobile in a place, send SMS:

“#stockade#password#semidiameter#” to unit to set the restricted district.

For example, Send SMS: “#stockade#123456#3#”, “3” represents 300 meters.

In case of breach, it will send SMS “stockade!+Geo-info” to the authorized number.

6.8.2 Cancel: Send SMS: “#nostockade#password#” to deactivate this function, it will reply “no stockade ok”.

6.9 Overspeed alarm

6.9.1 Set up: Send SMS: “#speed#password#speed number in 3 digits#” to the device (suppose the speed is 80km/h), EG, send SMS “#speed#123456#080#”, and it will reply “speed ok ”. When the car moves exceeding 80 km/h, the unit will send SMS alert “speed alarm” to the authorized number.

6.9.2 Cancel: send SMS “#nospeed#password#” to deactivate the overspeed alarm. It will reply “cancel speed ok”.

6.10 ACC ON alarm

6.10.1 Send SMS “#ACC#ON#” to device to start illegal start alarm function, when vehicle ignition on, device will reply “ACC!! +IMEI number+Long&Lat” to the authorized number.

6.10.2 Send SMS “#ACC#OFF#” to device to close the function.

6.11 SOS alarm

When connect external SOS wire, if press the SOS button, device will reply "SOS alarm! +IMEI number+Long&Lat" to authorized number.

6.12 Time Zone Setting

Remark: UTC+8 is default time zone.

6.12.1 Send SMS “**#timezone#password#direction#time zone value in hours#time zone in munites#**”. If set OK, it will reply “time zone ok”. For example, if in UTC-6, send SMS “**#timezone#123456#W#6#00#**”. If in UTC+5.30, send SMS “**#timezone#123456#E#5#30#**”.

6.13 Cut oil or circuit (optional)

Send SMS “**#stopoil#password#**” to device, it will reply “stop oil ok”, cut oil successfully.

Send SMS “**#stopelec#password#**” to device, it will reply “stop electricity ok”, cut circuit successfully.

6.14 Recover oil or circuit

Send SMS “**#supplyoil#password#**” to device, it will reply “supply oil ok”, recover oil successfully.

Send SMS “**#supplyelec#password#**” to device, it will reply “supply electricity ok”, recover circuit successfully.

6.15 Power failure alarm

Built-in backup battery to send SMS “cut power alert! +IMEI number+Long&Lat” to the authorized number when the power was cut.

6.16 Check device setting parameters

Send SMS “**TCP**” to device, device will reply SMS “ IP+port+APN+GPRS setting(A: valid,V: invalid).

6.17 GPRS setting

User must send SMS via cell phone to set IP, port and APN before starting GPRS.

6.17.1 Setting APN

6.17.1.1 APN standards for Access Point Name and differs from country to country.

For more information about the local APN, inquiry from your local GPRS network operator.

6.17.1.2 Send SMS “**#apn#password#APN content#APN user name#APN password#**” via a cell phone and if succeeded, the tracker will return the message “set APN OK”.

E.g. send SMS command “**#apn#123456#cmnet#**”.

Notes: CMNET is the APN content of China Mobile (it has no APN user name and password). If there is no APN user name and password, then no need to write APN user name and password.

6.17.2 IP and Port setting

Send SMS “**#IP#password#ip address#port number#**”. If succeeded,

“set ip address and port ok” will be returned by SMS.

E.g, Send SMS command “**#IP# password #58.64.200.27#6780#**” to the device
(58.64.200.27 is IP, 6780 is port, IP is in capital)